


Take the responsibility for correct dismantling and assembling. In case of washing or mending of the vest/jacket, the Hit-Air has to be dismantled and assembled carefully and correctly, otherwise it may not work as originally intended or may be damaged.

## Packed Neck cushion / A-type.


### How to assemble the airbag system (Key Box B-type)

1. Spread out the vest/jacket on a flat surface, with the inside up, and open the zipper across the lower part of the inside of the jacket

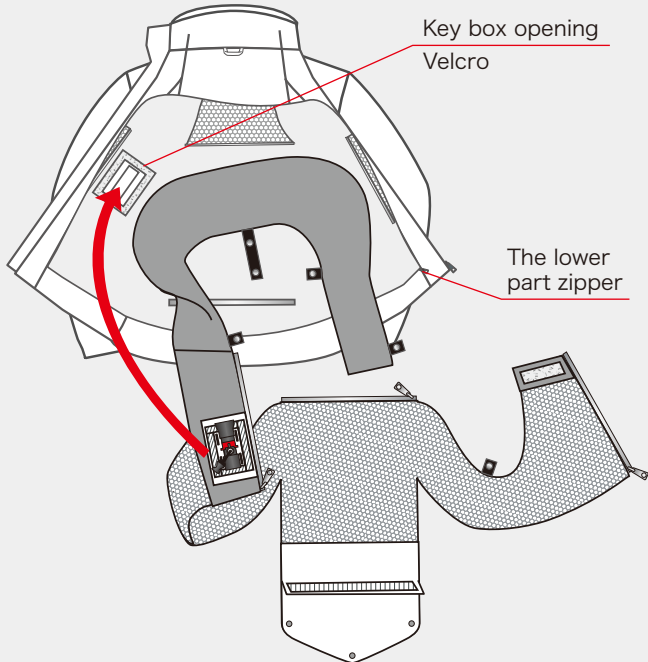

2. Place the key box of the Hit-Air in the opening of the right-hand side of the jacket and fasten it with Velcro on all sides.

3. Let the neck cushion go through from the inside of the right neck opening in the direction of an arrow. Then put its end into the left neck opening.

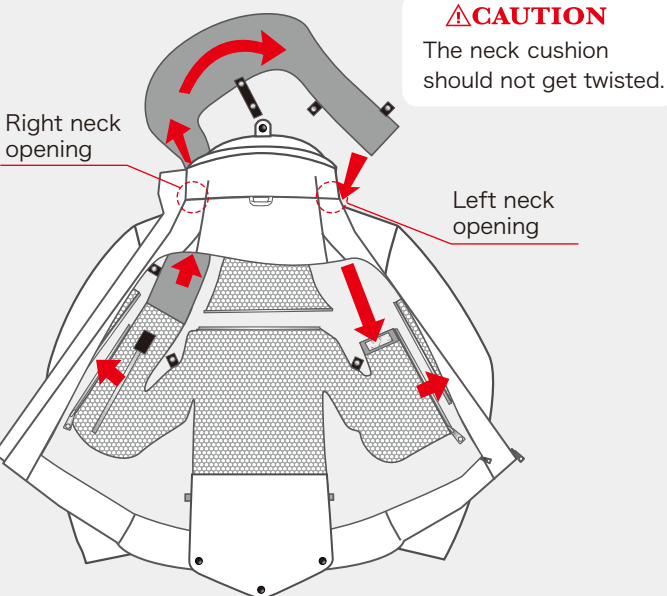


**⚠ CAUTION**  
The neck cushion should not get twisted.

**⚠ CAUTION**  
Don't pull air cushions by force. It may cause damage to the Airbag system.


4. Join the end of the neck cushion to the D Velcro of the body cushion.

5. Join 3 zippers of A, B and C to the inside of the jacket.

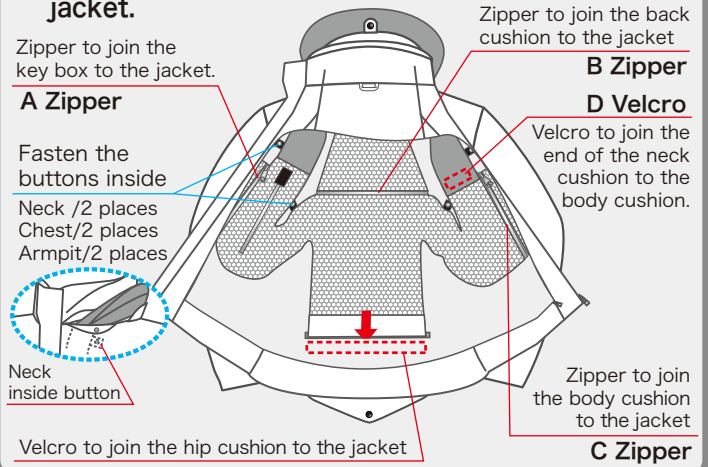


7. The lower part zipper closed.

Install the plastic gas cartridge cover by hexagon wrench(3mm).

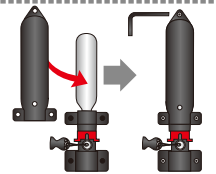

\*Some hos no plastic cover.

8. Fit the neck cushion which is folded in half into the standup collar.

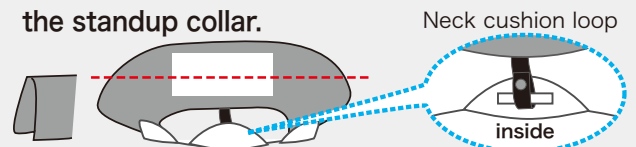


**⚠ CAUTION**  
Folding up the cushion more than once or rolling it up may damage the cushion when activated.

**Never roll up**



9. Fasten plastic buttons on the neck and the hip.

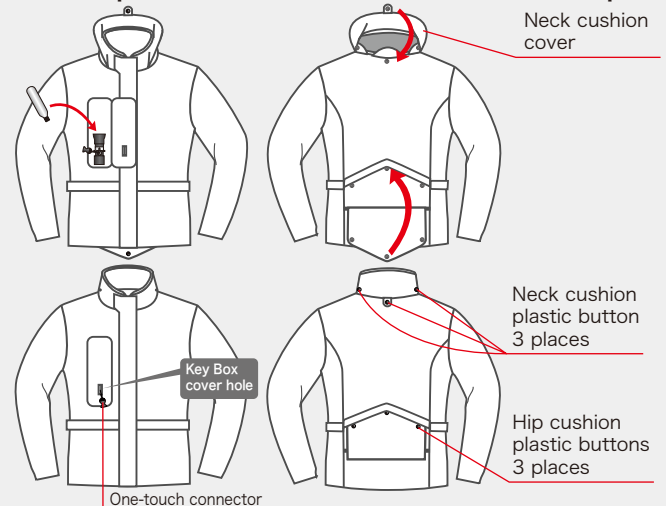

10. Lastly, install a CO2 cartridge and let the female side of the one-touch connector out through the hole of the key box cover and close the zipper.