



Take the responsibility for correct dismantling and assembling. In case of washing or mending of the vest/jacket, the Hit-Air has to be dismantled and assembled carefully and correctly, otherwise it may not work as originally intended or may be damaged.

Packed Neck cushion / A-type. How to dismantle the airbag system (Key Box B-type)


1. Remove the plastic gas cartridge cover by hexagon wrench (3mm).

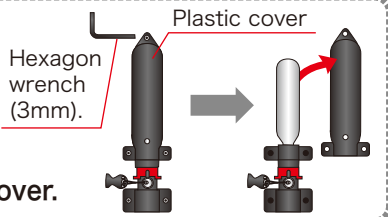

*Some has no plastic cover.

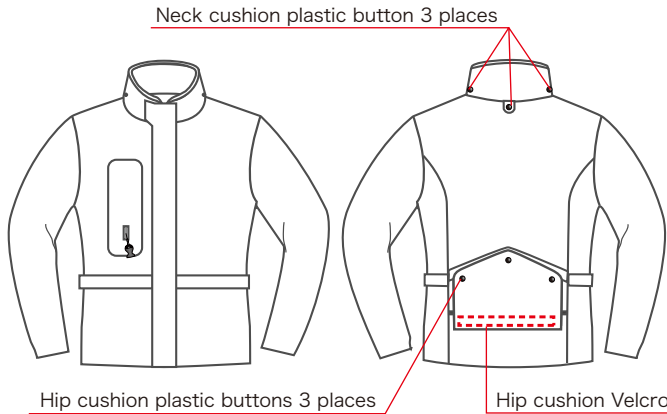


5. Open 3 zippers for the key box(A), for the back cushion(B) and for the body cushion(C) of the inside of the jacket.

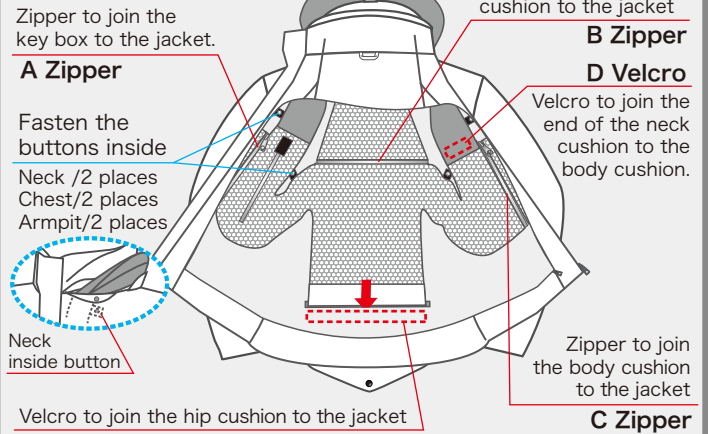

6. Open the Velcro (D)

7. The neck and pull it in the direction of an arrow to be separated from the jacket.

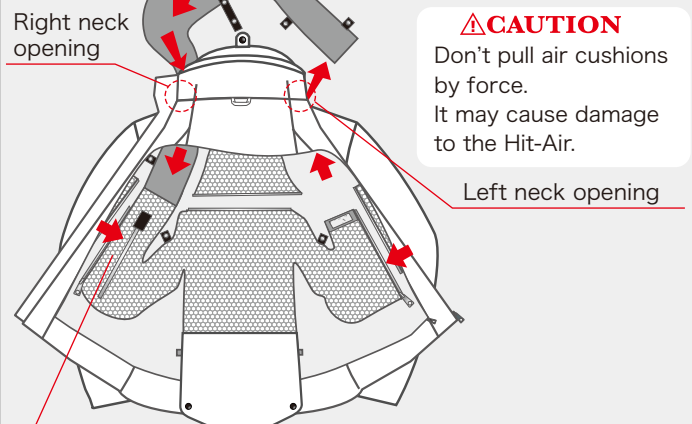


CAUTION

Don't pull air cushions by force. It may cause damage to the Hit-Air.

8. Unfasten Velcro around the key box opening to separate from the jacket.

9. Dismantle is complete

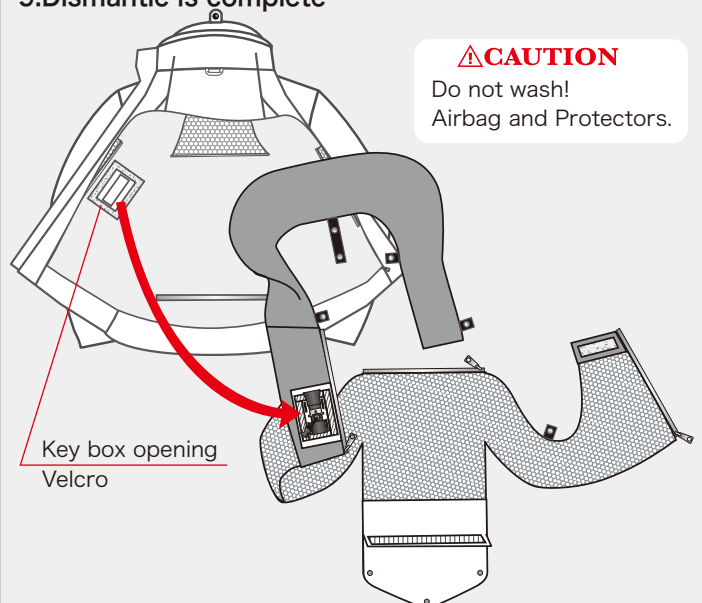


CAUTION

Do not wash! Airbag and Protectors.

2. Unscrew the CO2 cartridge to remove.

CAUTION Never attempt to turn, loosen or remove the CO2 cartridge except for reassembling.

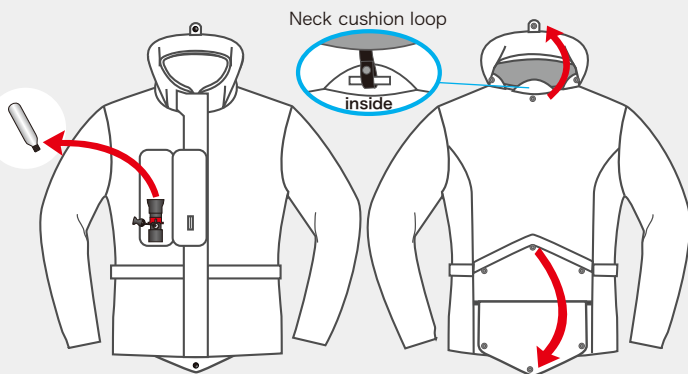

3. Unfasten plastic buttons of the neck and hip cushions.

4. Fully open the front zipper and the zipper across the lower part of the inside of the jacket.

